

Windows Server Assignment

Guides for the assignment

Sou Chanrojame, Orn Pheakdey, Long Neron, Then Sivthean, Le Sreyma

Copyright © Sou Chanrojame 2025

Table of contents

1. Introduction	3
1.1 Contents	3
2. File Server	4
2.1  Step 1: Install the File Server Role	4
2.2  Step 2: Create a Shared Folder	4
2.3  Step 3: Access the Share from a Client	5
2.4  Step 4 (Optional): Map a Network Drive	5

1. Introduction

Welcome to Windows Server Assignment. This includes guides for the assignment.

1.1 Contents

- AWS Cloud
- File Server
- DNS Server (Domain name <-> IP)
- DHCP Server
- VPN Server
- Web Server (http, https)
- Domain Controller (users, computer...)
- FTP Server (Share resource Internet)
- Proxy Server (Sharing and caching Internet)
- Terminal Server
- Load Balancing
- Failover cluster
- Database Server (MySQL, PostgreSQL, MongoDB, SQL Server, Oracle)
- Backup Server
- Model: LLMs - Large Language Model


**Note**

hello world

2. File Server

2.1 ✨ Step 1: Install the File Server Role

1. Open **Server Manager**.
2. Click **Manage** → **Add Roles and Features**.
3. In the wizard:
4. Click **Next** until you reach **Server Roles**.
5. Expand **File and Storage Services** → **File and iSCSI Services**.
6. Check ☒ **File Server**.
7. Click **Next** → **Install**.
8. Wait for the installation to complete, then click **Close**.

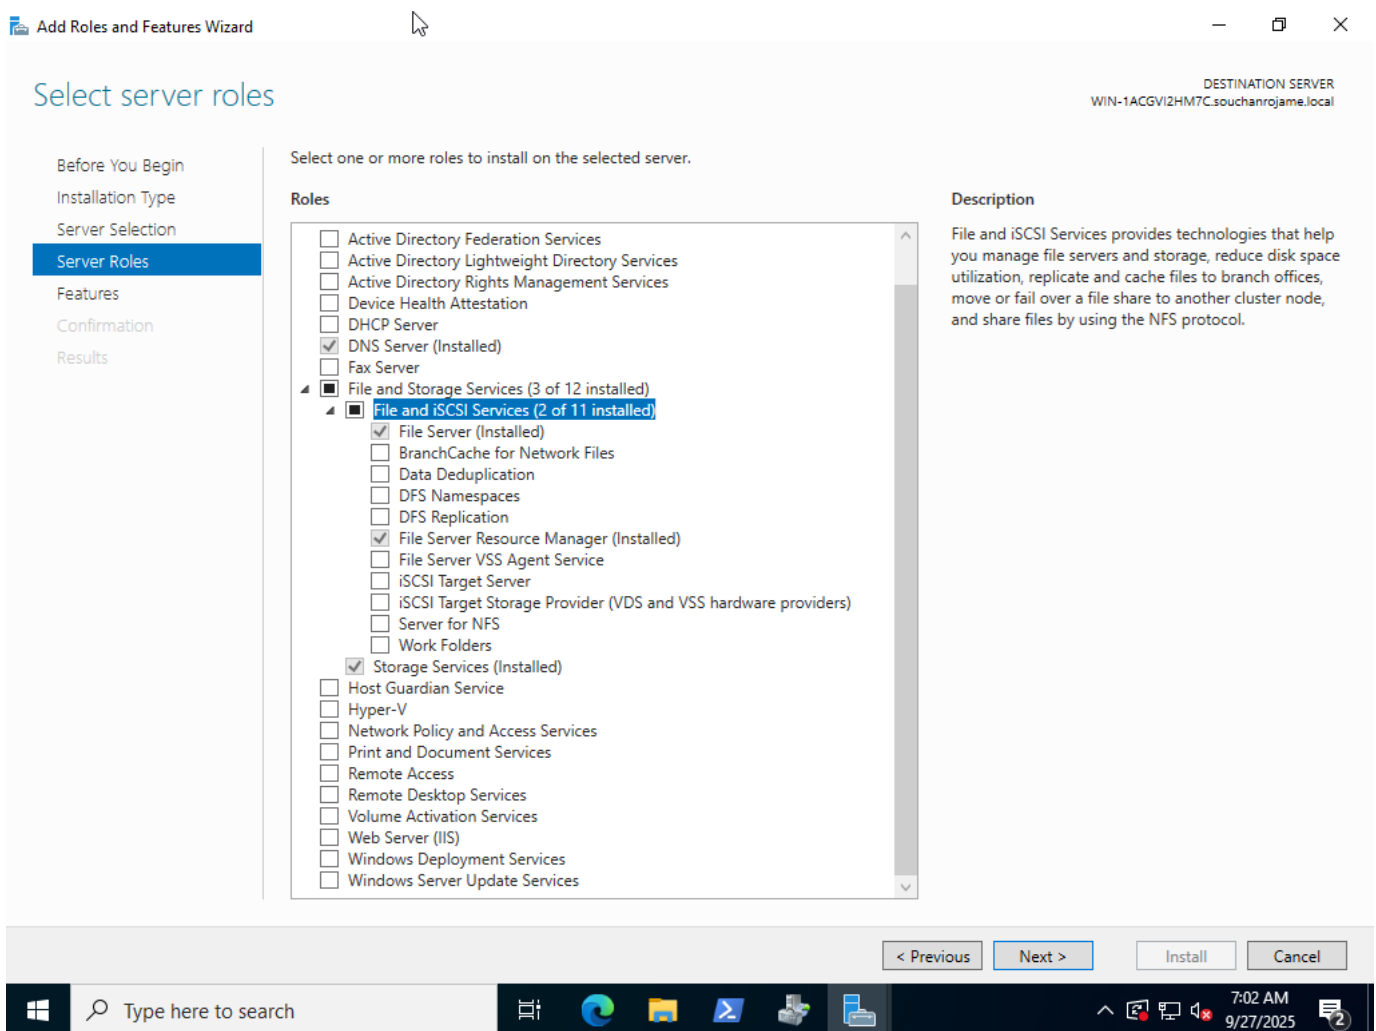

2.2 📁 Step 2: Create a Shared Folder

1. Create a folder on a disk (e.g., `D:\Shared`).
2. Right-click the folder → **Properties** → **Sharing** tab.

3. Click **Advanced Sharing**.
4. Check ☒ **Share this folder**.
5. Set **Share name** (e.g., `SharedFiles`).
6. Click **Permissions** → Add users/groups or give **Everyone** Read/Write if needed.
7. Click **OK** on all dialogs.

2.3 Step 3: Access the Share from a Client

On another computer in the same network:

- Open **File Explorer**.
- In the address bar, type:

```
\\<ServerName>\SharedFiles
```

or by IP:

```
\\192.168.1.10\SharedFiles
```

You should now see the folder content. If prompted for credentials, enter a valid user account from the server.

2.4 Step 4 (Optional): Map a Network Drive

To make it persistent on the client machine:

1. In File Explorer → **This PC** → **Map network drive**.
2. Choose a drive letter, and enter:

```
\\<ServerName>\SharedFiles
```

1. Check ☒ **Reconnect at sign-in**.
2. Click **Finish**.